


Large Wall Mount Setup Guide

Model Number: PT-WM-3-xx

<https://ptzoptics.com/ptz-camera-wall-mounts/>

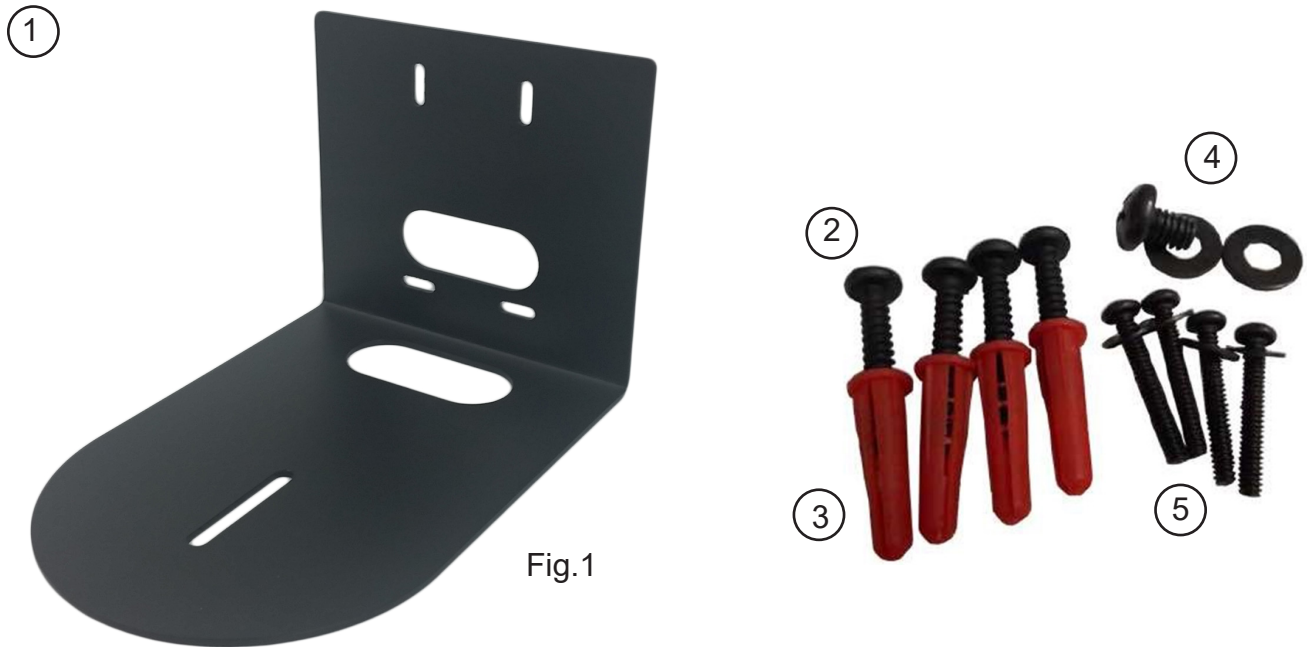

What's Included:

- 1 - Large Wall Mount (1x) BK/WH
- 2 - #10-16x1 1/4" Phillips Pan Head Sheet Metal Screw with Flat Washer (4x)
- 3 - 10-12 x 1" Conical Plastic Anchor 1/4" Drill Size (4x)
- 4 - 1/4"-20x 3/8" Phillips Pan Head (4x)
- 4 - 1/4" Machine Screw Flat Washer (2x)
- 5 - #6-32x 1" Phillips Pan Head Machine Screw (4x)

Mounting Instructions:

Step 1

For masonry or drywall wall:

1. Position Large wall mount (Fig 2) on wall and mark wall for anchor placement (Fig 2, 1)
2. Pre-drill 1/4" holes, minimum 1" deep.

For double gang electrical box:

1. Position over box with slots overlaying device mounting holes (Fig 2, 1) on box.

Step 2

For masonry or drywall wall:

1. Place included anchors (Fig 1, 1) in wall and mount to anchors using included #10 sheet metal screws. (Fig 1, 2)

For double gang electrical box:


1. Mount to box using #6 machine screws and washers. (Fig 1, 3)

Step 3

1. Drill hole in wall through rear exit opening for cable access, or use base exit opening. (Fig 2, 2)

Step 4

1. Mount Camera to mount (Fig 2, 3) with included 1/4-20 machine screw. (Fig 1, 4)
2. Utilize (0,1,2) 1/4" machine screw flat washers as required. (Fig 1, 4) Note: 1/4" machine screw flat washers are to be used depending upon depth of thread insert in base of camera, in order to achieve a snug fit.
3. Pass all cables through opening in mount (Fig 2, 2) and connect.

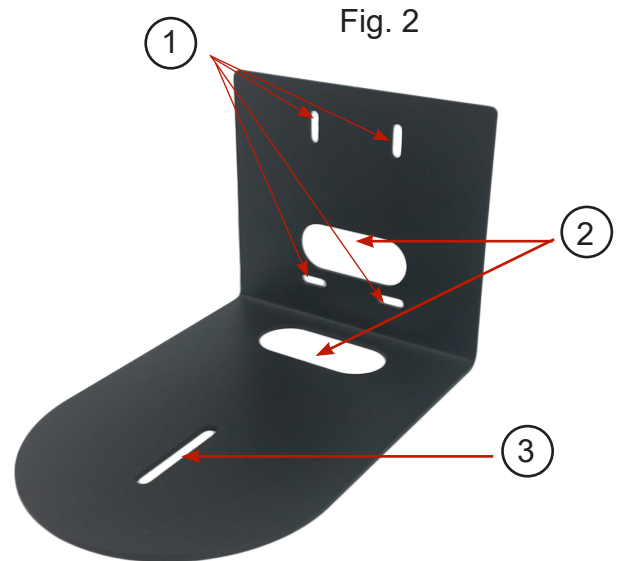

Mount Compatibility:

PT30X-4K-xx-G3
PT30X-LINK- 4K-xx

Other Cameras:

This mount has been designed for use with most large based cameras utilizing a 1/4-20" mounting hole as can be found on SONY, Panasonic, Cisco, Polycom and Vaddio cameras.

For more information on PTZOptics mounts and other products please visit: <https://ptzoptics.com/>



484-593-2247 | ptzoptics.com/contact | ptzoptics.com