



Model 210

Announcer's Console


Configuration Guide

This Configuration Guide is applicable for serial numbers: M210-01151 to M210-01250



Model 210 Configuration Settings

For full documentation go to www.studio-tech.com

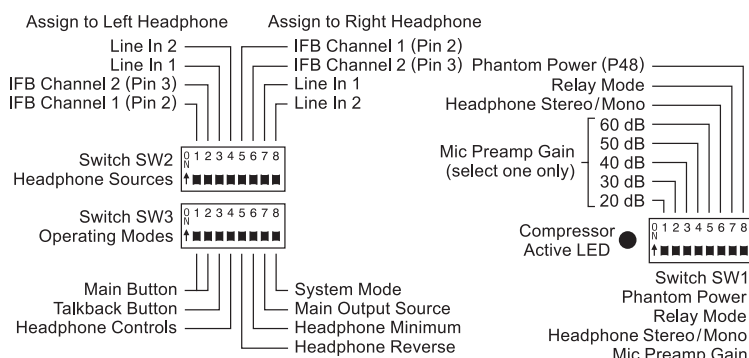

Main Button

- ▼ ▼ Push to Mute
- ▲ ▼ Push to Talk
- ▼ ▲ Latching
- ▲ ▲ Hybrid

Talkback Button

- ▼ Push to Talk
- ▲ Hybrid

Headphone Controls

- ▼ Level/Level
- ▲ Level/Balance

Headphone Reverse

- ▼ Normal
- ▲ Reverse

Headphone Minimum

- ▼ -40 dB
- ▲ Full Mute

Main Output Source

- ▼ Mic Preamplifier
- ▲ Compressor

System Mode

- ▼ On-Air
- ▲ Production

Phantom Power (P48)

- ▼ Off
- ▲ On

Relay Mode*

- ▼ Follows Main Out
- ▲ Follows Talkback Out

Headphone Stereo/Mono

- ▼ Stereo
- ▲ Mono


* Relay function provided only on units with serial numbers M210-01151 and later.

**STUDIO
TECHNOLOGIES**

www.studio-tech.com

31049 Rev A

Model 210 Bottom Panel

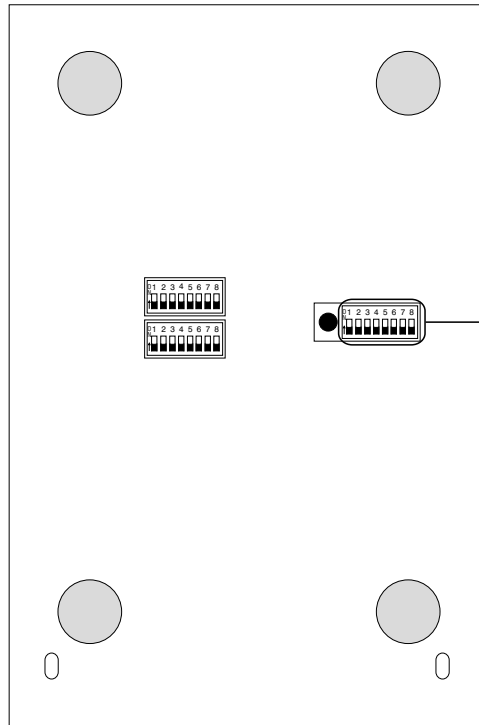

**Switch SW1 Settings
Detailed Below**

SW1-1 through SW1-5 – Mic Preamp Gain




20 dB



30 dB



40 dB



50 dB




60 dB




0 dB (no gain)

SW1-6 – Headphone Stereo/Mono




Stereo




Mono (sums L+R)

SW1-7 – Relay Contact




Follows main output status




Follows talkback output status

SW1-8 – Phantom Power (P48)




Off




On

Model 210 Bottom Panel

Switch SW2 Settings
Detailed Below

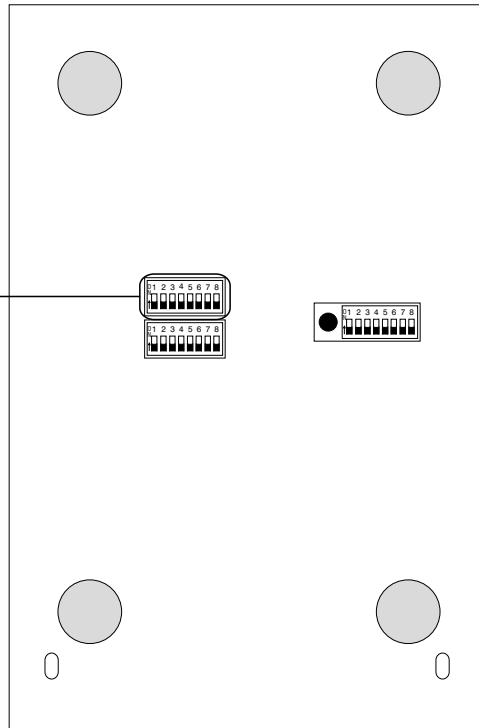


SW2-1 through SW2-4 – Left Channel Headphone Source Selection

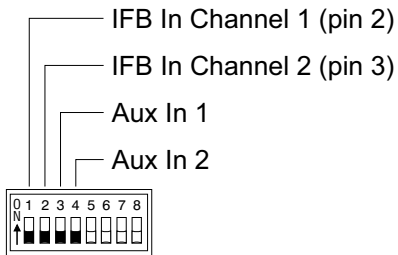

On to enable source; multiple sources will sum


SW2-5 through SW2-8 – Right Channel Headphone Source Selection

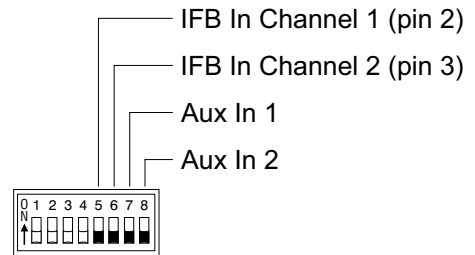


On to enable source; multiple sources will sum

Model 210 Bottom Panel


Switch SW3 Settings
Detailed Below

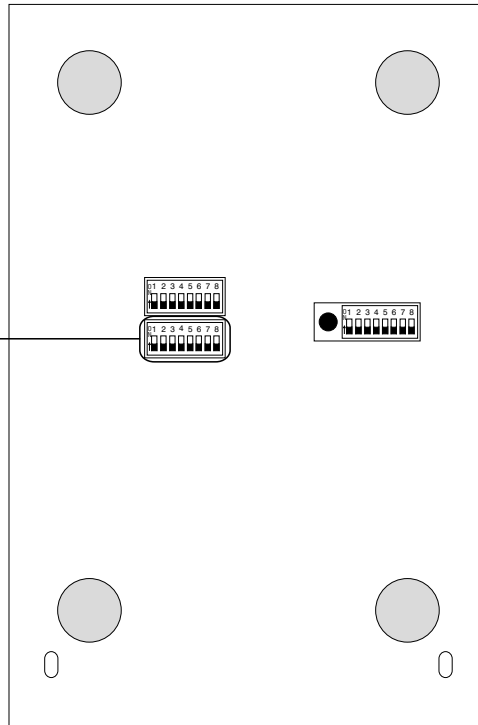


SW3-1 and SW3-2 – Main Button Mode




Push to mute (“cough”)



Push to talk




Alternate action (“latching”)




Hybrid (press and hold to enable, tap to latch)

SW3-3 – Talkback Button Mode




Push to talk




Hybrid (press and hold to enable, tap to latch)

SW3-4 – Headphone Control Mode




Dual channel (“level/level”)




Stereo (“level/balance”)

SW3-5 – Headphone Control Operation




Normal




Reverse left/right

SW3-6 – Headphone Output Minimum Level




–40 dB




Full mute

SW3-7 – Main Output Source




Mic preamplifier




Compressor

SW3-8 – System Mode



On-air (talkback output status impacts main output status)



Production (talkback output status does not impact main output status)